


How to Change Key Settings on PB840 Ventilator

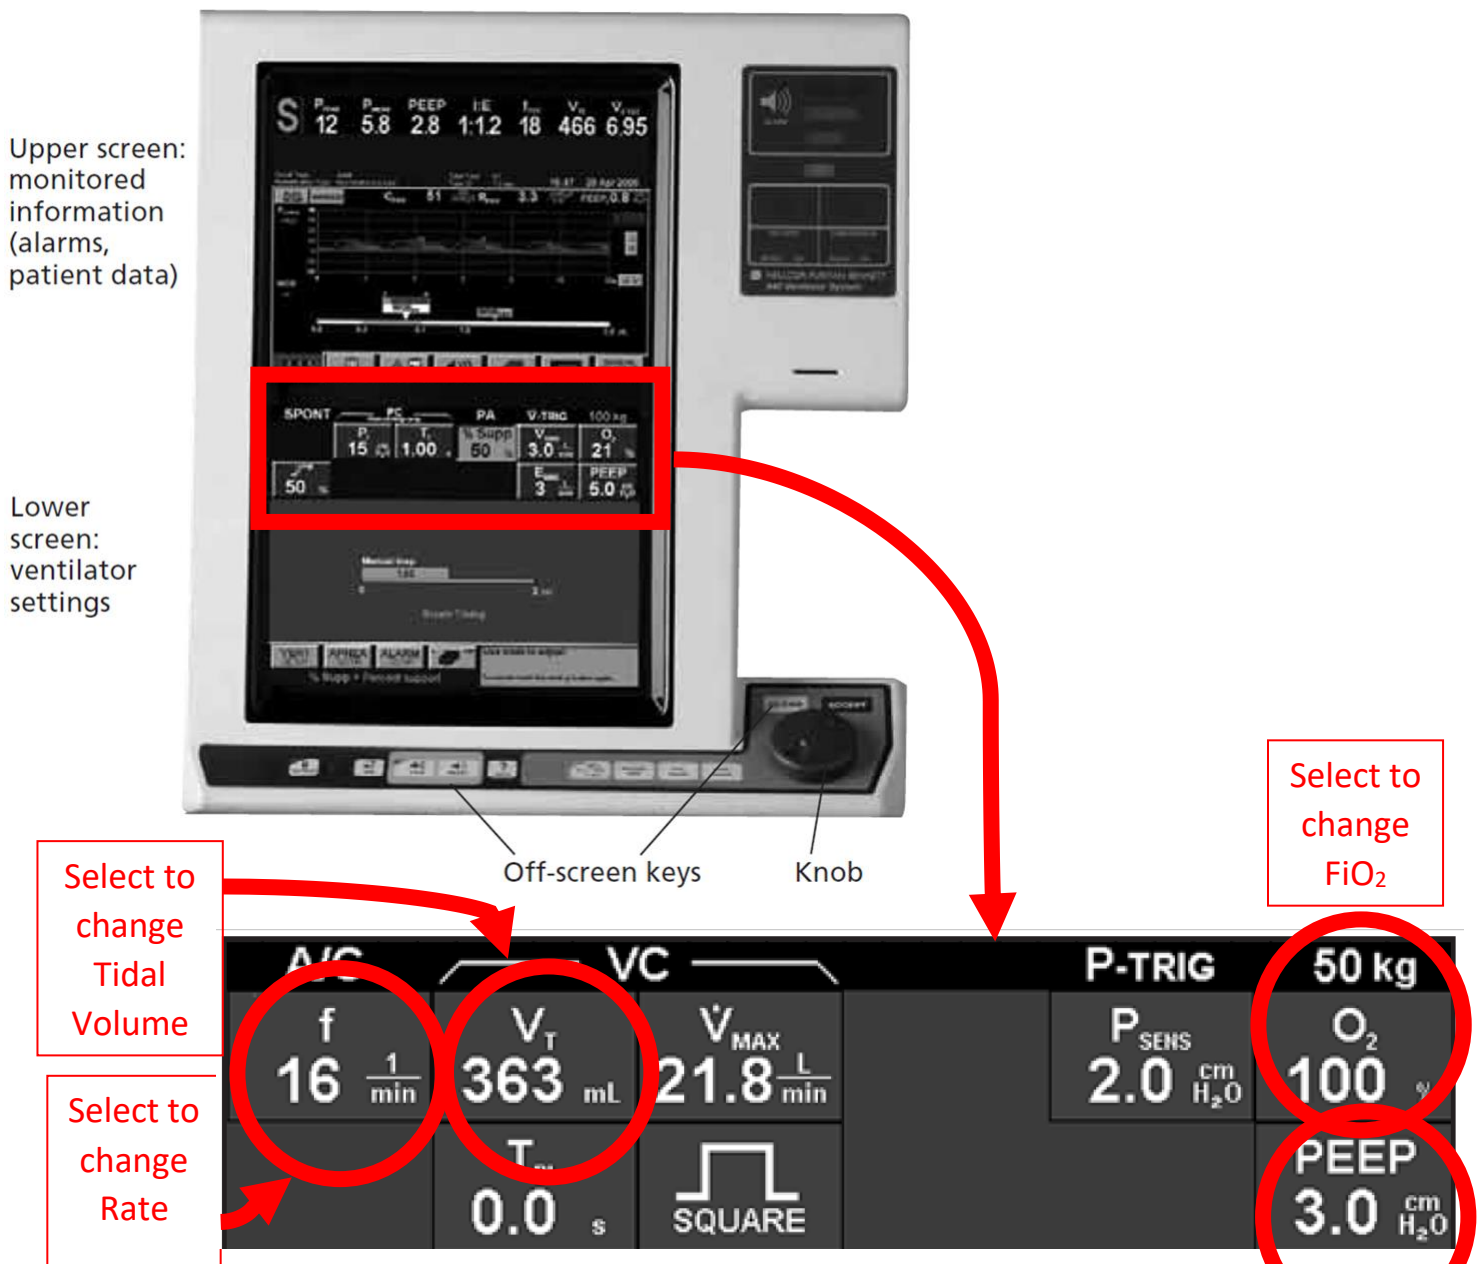

Main settings are the buttons displayed at the top of the lower screen, and you can only change them individually. Follow these steps to change main settings:

- ➡ Touch the setting you want to change
- ➡ Turn the knob to the set value
- ➡ Press ACCEPT to apply the new setting

Remember: touch, turn, ACCEPT!